



Professional Laminator PL900

3T Supplies AG Peach Division
 Chaltenbodenstrasse 6D
 CH-8864 Schindellegi
 e-mail: info@peach.info
 web: www.peach.info




Power cord



Pouch exit tray



Power switch

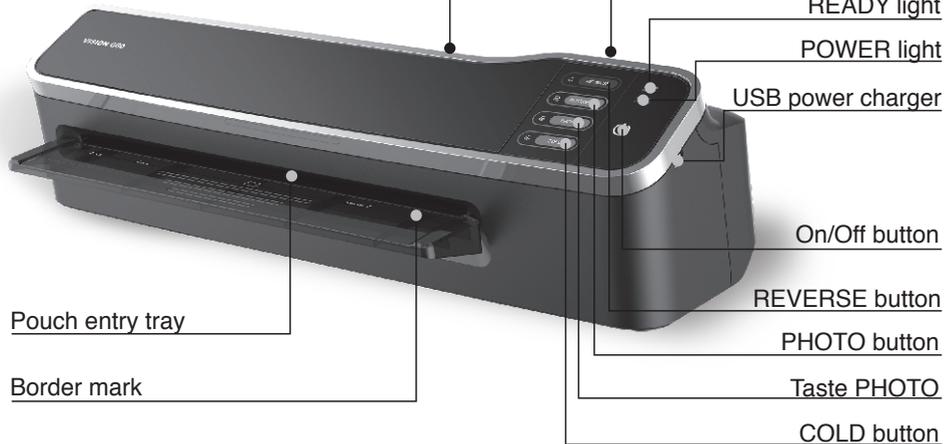

Pouch entry tray

Border mark

General Safeguards

- Place machine on a stable surface
- DO NOT use the laminator if its power cord is damaged.
- Ensure no lamination runs with metal objects like staples, paper clips.
- DO NOT attempt to open or otherwise repair the machine.
- Keep the machine including its power cord away from heat and water sources.
- DO NOT allow children to use this machine.
- Turn off the machine after each use.
- Unplug the machine when not in use for an extended period.
- DO NOT laminate an empty pouch.
- Use pouches required for the appropriate pouch setting.
- Follow the instructions and specifications shown on the machine as well.
- Leave the Pouch exit tray clear of any objects.

Specifications/Technical Data

Max. laminating width	335mm (up to A3)
Laminating pouch thickness	75mic-250mic
*Laminating speed (80mic)	up to 1000mm per min.
Pouch jam recovery	Yes
Warm-up time	60 seconds
Auto shut off time	30 minutes
Power	220-240V/50-60H, 1200W
USB power charger	DC 5V 1.5A
Dimensions	520 x 175 x 160mm
Net weight	5.1 kg

* This may vary depending on the total pouch & paper thickness


Long life tips

- Run a plain paper board (about 180gsm-250gsm) through the machine to clean rollers.
- Leave the machine stand-by for 30 minutes and it will shut off by itself.
- Let the machine fully cool down before you put it away.

POUCH JAM

- Follow the correct document/pouch insert direction.
- Only run a lamination job within the Border mark.
- Only run a lamination job when READY light turns green.
- Make sure there is enough clear space (min. 500mm) behind the machine.

LAMINATING OPERATION:

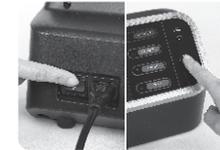

(Fig. 1)

Turn on the Power switch, and press the On/Off button.




(Fig. 2)

Select the job by pressing the correct button:
 DOCUMENT/PHOTO/COLD button.



(Fig. 3)

When READY light turns green and you hear the beeping sound, the machine is ready to start laminating.

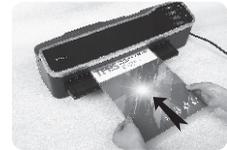

(Fig. 4)

Place the pouch (proper document inside) into the Pouch entry tray sealed edge first.



(Fig. 5)

Remove finished lamination from the Pouch exit tray at the back of the machine.



(Fig. 6)

In case of pouch jam, press the REVERSE button. Pull out the jammed pouch from the Pouch exit tray. Alternatively the machine will find out the jam itself and reverse by itself.



(Fig. 7)

Turn off the machine - Press the On/Off button and turn off the Power switch.



(Fig. 8)

Connect your device with USB power charger. The machine can support both Android and IOS system.